

# STOP FLOW VALVES

*Say 'Goodbye' to whipping air hoses*

Stop Flow Valves are designed to protect the operator from injury and property damage in situations where an air hose can fail or become disconnected while under pressure.

Stop flow valves allow full unrestricted flow of air while in their normal open position.

Stop flow valves automatically reset themselves after repair is made, so all you need to do is repair or replace the airline and your stop flow valve is ready to go again.



Available in 3/8", 1/2", 3/4", 1", 1 1/2" & 2"



Easily connects to your airline